

Element Discs



38-220011-4
Illustrated

Range Elements Centre Discs

Part #	Description	Package
38-220011-4	Chrome centre discs.	4/ pk.
38-220011B	Chrome centre discs.	100/ pk.

 
Stove & Oven Knobs



38-6412
Illustrated


Stove & Oven Knob Kits

Part #	Description	Package
38-6412	Universal oven dial knob kit.	Chrome knob & 4 inserts.
38-65200	Universal infinite stove dial knob kit.	4 chrome knobs, 4 dials & 4 inserts.

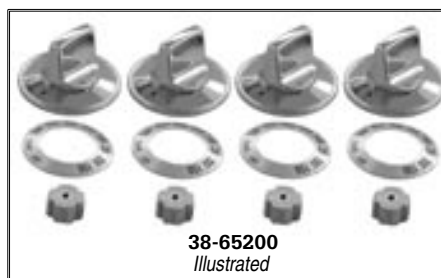

38-65200
Illustrated

 Receptacles

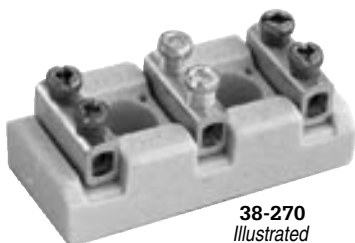

38-270
Illustrated

Range Element Terminal Blocks

Porcelain.

Part #	Description	Replaces
38-270	70 amp, 250 volt.	20010067.
38-11984-004	Block for UXY 542 & 538.	-

Appliance Outlet

Snap-in white appliance outlet.

Part #	Description	
38-320	15 amp, 125 volt.	203022-901, 85617.



38-320
Illustrated

Fuse Holders

Part #	Description
29-1011	Single fuse with single screw terminals.



29-1011
Illustrated